



W010F01

(for DC9257A use)

Enter Setup

Sense Mode: The scanner activates a decode session every time when it detects a change in ambient illumination and meets the requirement of the image stabilization timeout. Decode session continues until barcode is decoded or the decode session timeout expires.



W030003

Sense Mode

Sensitivity: This parameter specifies the degree of acuteness of the scanner's response to changes in ambient illumination. The higher the sensitivity, the lower requirement in illumination change to trigger the scanner. You can select an appropriate degree of sensitivity that fits the ambient environment.



WFF0305

High Sensitivity



WFF0310

** Medium Sensitivity



WFF0330

Low Sensitivity

Manual Mode: A trigger pull activates a decode session. The decode session continues until barcode is decoded or the trigger is released or the decode session timeout expires (default: 15 seconds; programmable).



W030000

**Manual Mode



W010F00

Exit Setup

